



---

## Transformation Copy

---

User Manual 05/2017



---

# Content

---

<b>1</b>	<b>Introduction</b> . . . . .	<b>3</b>
<b>2</b>	<b>Installation</b> . . . . .	<b>4</b>
<b>3</b>	<b>Licensing</b> . . . . .	<b>5</b>
3.1	License models . . . . .	5
3.1.1	Full license . . . . .	5
<b>4</b>	<b>Activation process</b> . . . . .	<b>6</b>
<b>5</b>	<b>Using Transformation Copy</b> . . . . .	<b>7</b>
5.1	Select the function . . . . .	7
5.2	Export of transformation parameters . . . . .	8
5.3	Import of transformation parameters . . . . .	9
<b>6</b>	<b>Known issues</b> . . . . .	<b>9</b>
<b>7</b>	<b>End User License Agreement</b> . . . . .	<b>10</b>

---

# Transformation Copy

---

## 1 Introduction

Transformation Copy is designed to transfer transformation data between similar scans in different projects. The project should be "registered", otherwise Transformation Copy will make no sense.

Features:

- export of scan transformation parameters
- import of scan transformation parameters
- takes into account the scan names and UUIDs

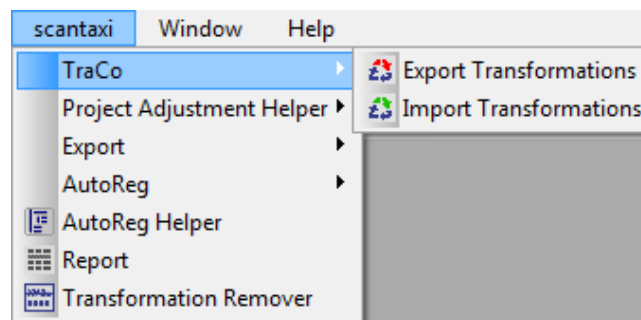


Figure 1: start using menu



Figure 2: start using toolbar

# Transformation Copy

## 2 Installation

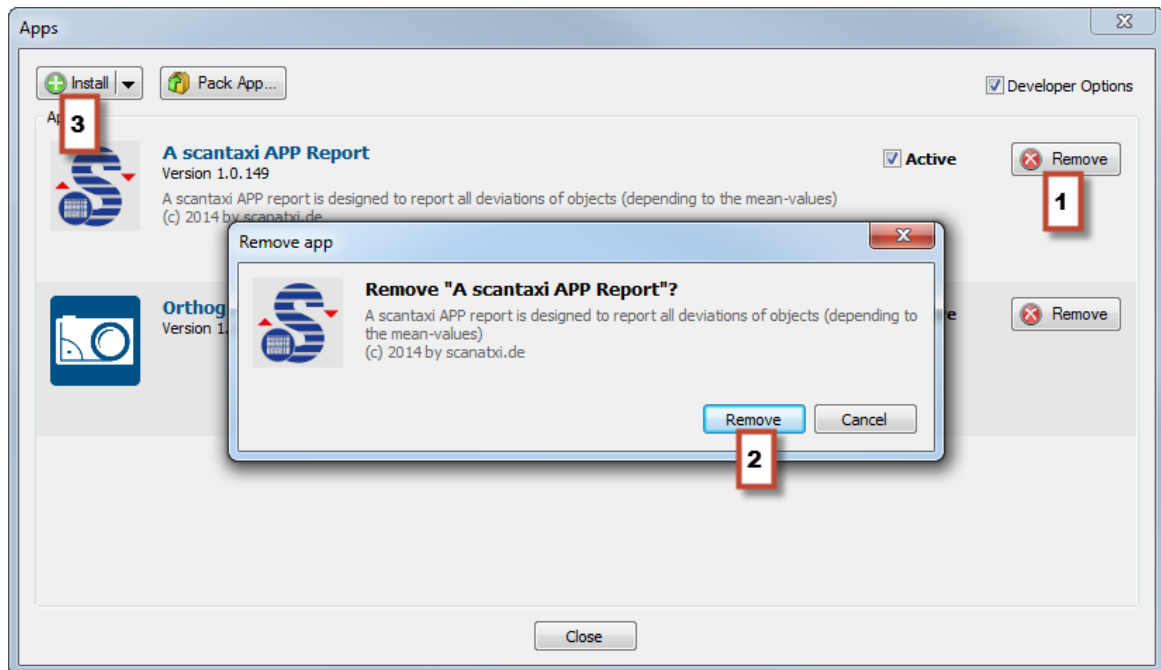


Figure 3: SCENE App Dialog

As part of the installation procedure for the new version, the old version must be removed (1, 2). Following this, Transformation Copy can be installed via App Manager (3), drag and drop or by double clicking on the app file in the Explorer.

scantaxi software: <http://www.scantaxi.de/software.html>

**Latest version:** <http://www.scantaxi.de/software/TraCo.html>

---

# Transformation Copy

---

## 3 Licensing

### 3.1 License models

Transformation Copy is available as:


#### 3.1.1 Full license

- Transformation Copy can be used without any limitation
- the license can be requested under [license@scantaxi.de](mailto:license@scantaxi.de)
- See chapter 4 for activation process

# Transformation Copy

## 4 Activation process

Starting Transformation Copy without a valid license will prompt the licensing dialog. A full license can be purchased or an one week trial requested.

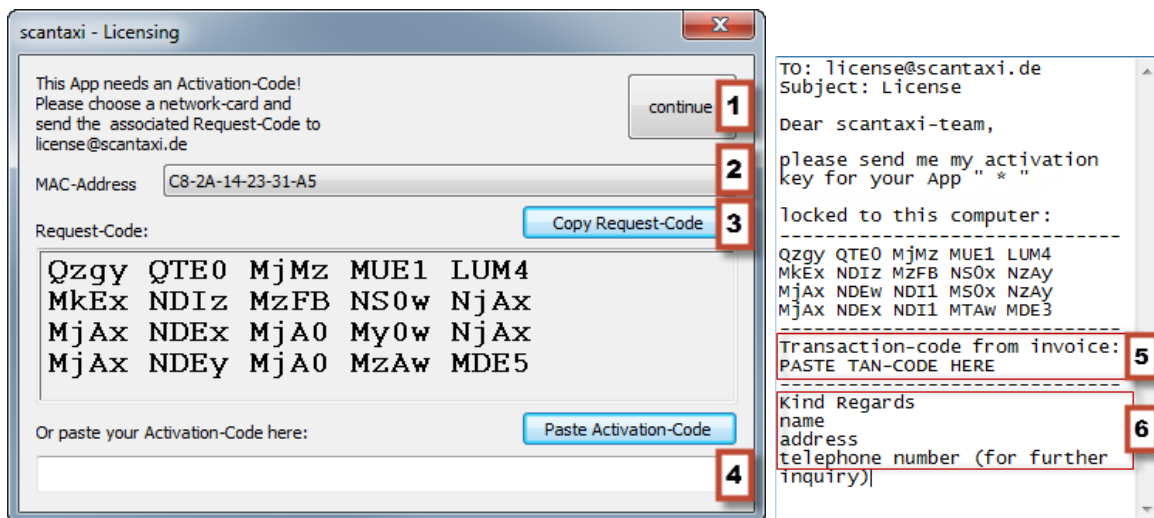

- Select a MAC address (2)
- Press "Copy Request-Code" to copy the e-mail to the clipboard (3)
- Copy clipboard to email
- Enter transaction number 0055555 (5) and your contact information (6)
- Send e-mail to license@scantaxi.de
- Paste received activation code (4)
- Activate license (1)

---

# Transformation Copy

---

## 5 Using Transformation Copy

### 5.1 Select the function

You can export and import scan transformations from one project to another (containing the same scans).

- Export Transformations - writes a special file for the transformation transfer
- Import Transformations - reads the special file for the transformation transfer generated in the step before
- Transformation Copy uses the scan name and UUID to identify the valid scans. Therefore it is possible to add the registered scans or only few of them to another project and copy the transformation parameters to them.

Beware: No objects will be copied, only the transformation parameters.

To use the APP, start the desired function from menu- or tool-bar.

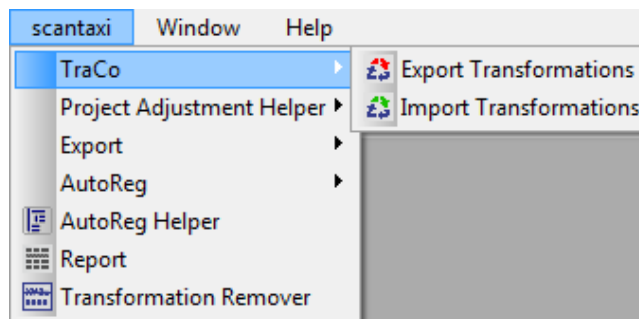


Figure 4: start using menu



Figure 5: start using toolbar

# Transformation Copy

## 5.2 Export of transformation parameters

to export the transformation parameters, select "Export Transformations" from the menu bar or tool bar (Fig. 6).

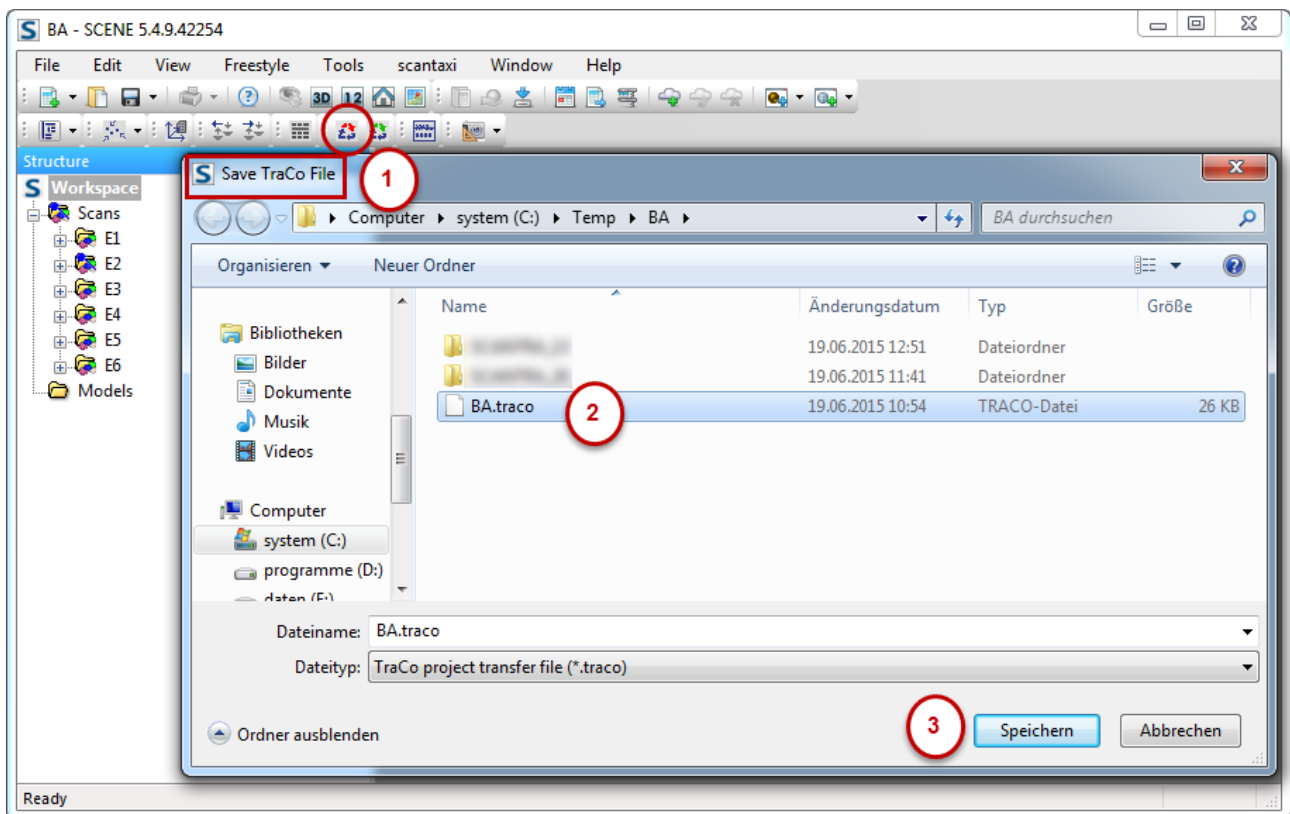


Figure 6: export scan transformations

- as shown in Fig. 6 press button (1)
- enter a file name or select previous file  
(WARNING no message will be shown, if overwriting files!)
- press save (3)

# Transformation Copy

## 5.3 Import of transformation parameters

to import the transformation parameters, select "Import Transformations" from the menu bar or tool bar (Fig. 7).

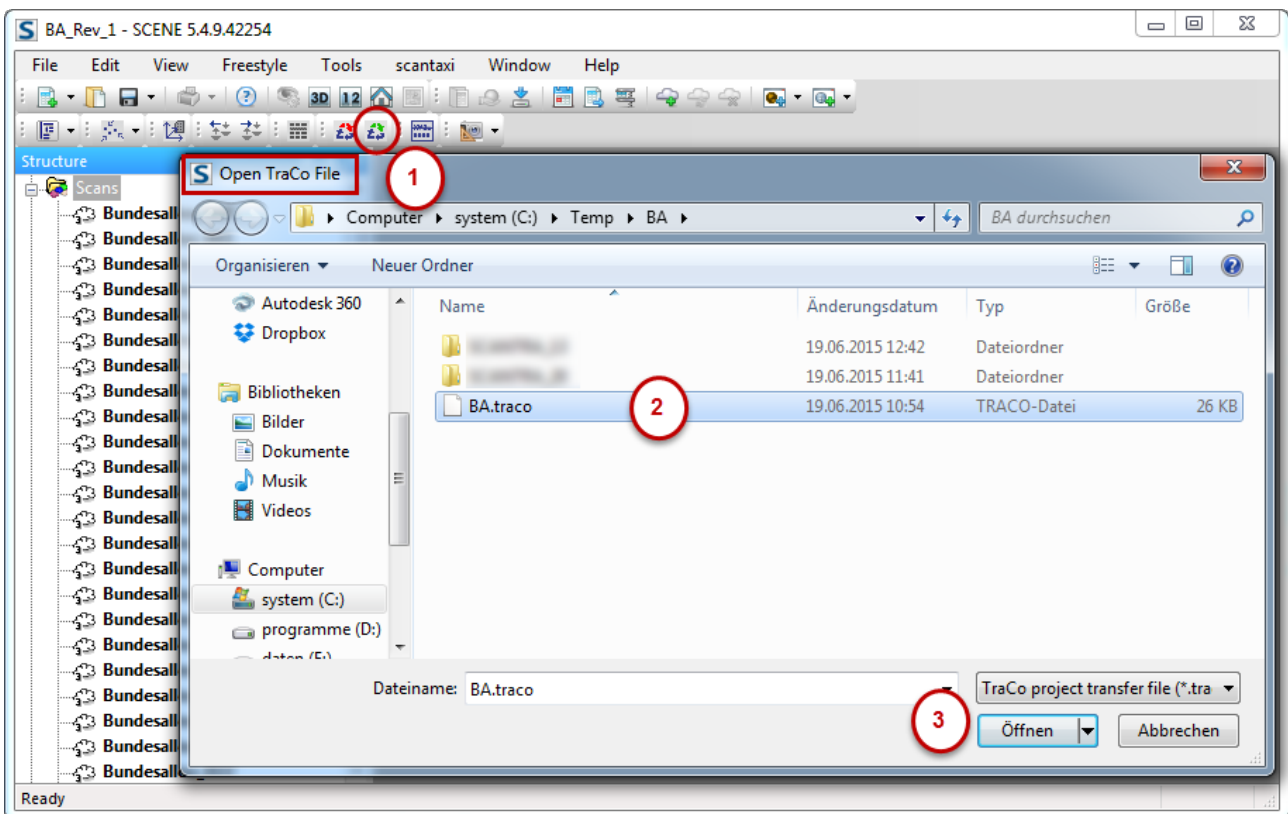


Figure 7: import scan transformations

- as shown in Fig. 7 press button (1)
- choose the file with the transformation parameters (exported previously chapter 5.2)
- press open (3)

## 6 Known issues

- Unloading the app while running will cause SCENE to crash
- BEWARE: APP does **not** show any message, if overwriting files!

---

# Transformation Copy

---

## 7 End User License Agreement

This Software License Agreement is part of the Operating Manual for the product and software System which you have purchased from scantaxi UG (haftungsbeschränkt) (collectively, the "Licensor"). By your use of the software you are agreeing to the terms and conditions of this Software License Agreement. Throughout this Software License Agreement, the term "Licensee" means the owner of the System.

- I The Licensor hereby grants the Licensee the non exclusive right to use the computer software described in this Operating Manual (the "Software"). The Licensee shall have no right to sell, assign, sub-license, rent or lease the Software to any third party without the Licensor's prior written consent.
- II The Licensor further grants the Licensee the right to make a backup copy of the Software media. The Licensee agrees that it will not decompile, disassemble, reverse engineer, copy, transfer, or otherwise use the Software except as permitted by this Agreement. The Licensee further agrees not to copy any written materials accompanying the Software.
- III The Licensee is licensed to use the Software only in the manner described in the Operating Manual. Use of the Software in a manner other than that described in the Operating Manual or use of the Software in conjunction with any non-Licensor product which decompiles or recompiles the Software or in any other way modifies the structure, sequence or function of the Software code, is not an authorized use, and further, such use voids the Licensor's set forth below.
- IV The only warranty with respect to the Software and the accompanying written materials is the warranty, if any, set forth in the Quotation/Purchase Order and Warranty Appendix B pursuant to which the Software was purchased from the Licensor.
- V THIS WARRANTY IS IN LIEU OF OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE SOFTWARE AND WRITTEN MATERIALS. IN NO EVENT WILL THE LICENSOR BE LIABLE FOR DAMAGES, INCLUDING ANY LOST PROFITS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE SOFTWARE, NOTWITHSTANDING THAT THE LICENSOR HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, THE LICENSOR WILL NOT BE LIABLE FOR ANY SUCH CLAIM BY ANY OTHER PARTY.
- VI In the event of any breach by the Licensee of this Agreement, the license granted hereby shall immediately terminate and the Licensee shall return the Software media and all written materials, together with any copy of such media or materials, and the Licensee shall keep no copies of such items.
- VII The interpretation of this Agreement shall be governed by the following provisions:
  - a This Agreement shall be construed pursuant to and governed by the substantive laws of Germany.
  - b If any provision of this Agreement is determined by a court of competent jurisdiction to be void and non-enforceable, such determination shall not affect any other provision of this Agreement, and the remaining provisions of this Agreement shall remain in full force and effect. If any provision or term of this Agreement is susceptible to two or more constructions or interpretations, one or more of which would render the provision or term void or non-enforceable, the parties agree that a construction or interpretation which renders the term of provision valid shall be favored.
  - c This Agreement constitutes the entire Agreement, and supersedes all prior agreements and understandings, oral and written, among the parties to this Agreement with respect to the subject matter hereof.
- VIII If a party engages the services of an attorney or any other third party or in any way initiates legal action to enforce its rights under this Agreement, the prevailing party shall be entitled to recover all reasonable costs and expenses (including reasonable attorney's fees before trial and in appellate proceedings).